



## **JKTT 40-100 flow sensor mounting flow.**

Precautions for installation:

- 1、 Since the flow sensor is powered by electricity, during installation, care should be taken that the sensor is not located above the valve, flanged connections and other parts subject to fluid leakage to prevent liquid from entering the sensor.
- 2、 When the sensor cable passes from top to bottom as shown in the figure, there may be a problem with the sensor closing, since the stale water droplets flowing along the cable directly to the sensor can lead to damage, you must make a bend down. As shown below:

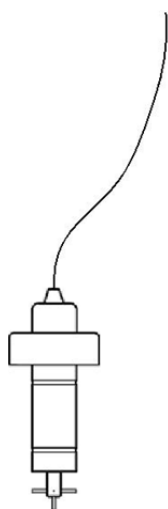

Incorrect connection

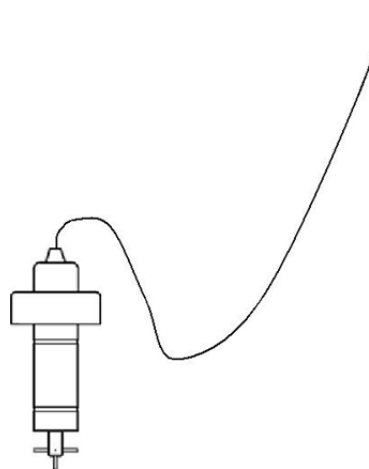

Correct connection

- 3、 After installing the sensor, the user must install a simple waterproof bag with an impermeable material to prevent the ingress of water droplets
- 4、 When cleaning the sensor, do not use water, you can use a dry cloth to wipe
- 5、 Maintenance of the equipment, the installation process, pay attention to the protection of the sensor, avoid contact with water.